



Huawei P9 Lite Fingerprint Sensor Replacement

Replace the fingerprint sensor in your Huawei P9 Lite.


Written By: Tobias Isakeit



INTRODUCTION


Use this guide to replace the fingerprint sensor in your Huawei P9 Lite.

Step 1 — Back Cover

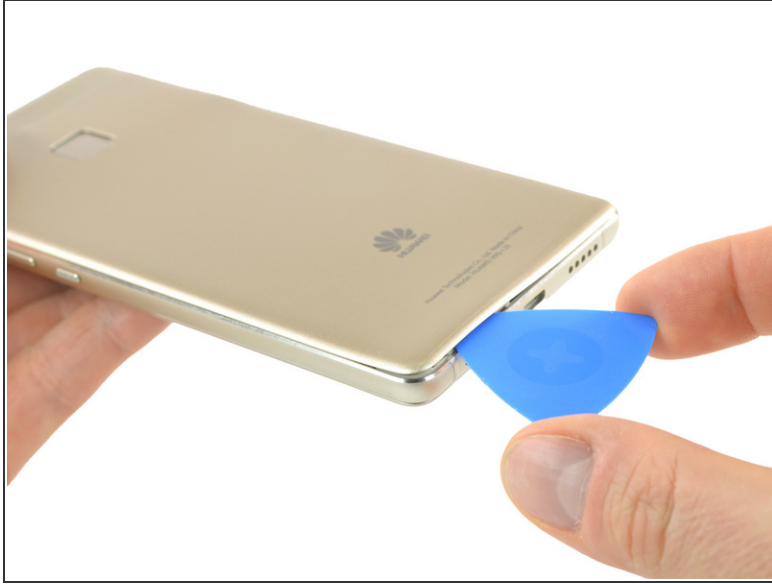


- Start on the bottom left corner of the back cover with an opening pick.
- Work your way around counterclockwise and carefully pry the plastic tabs open one by one.

Step 2

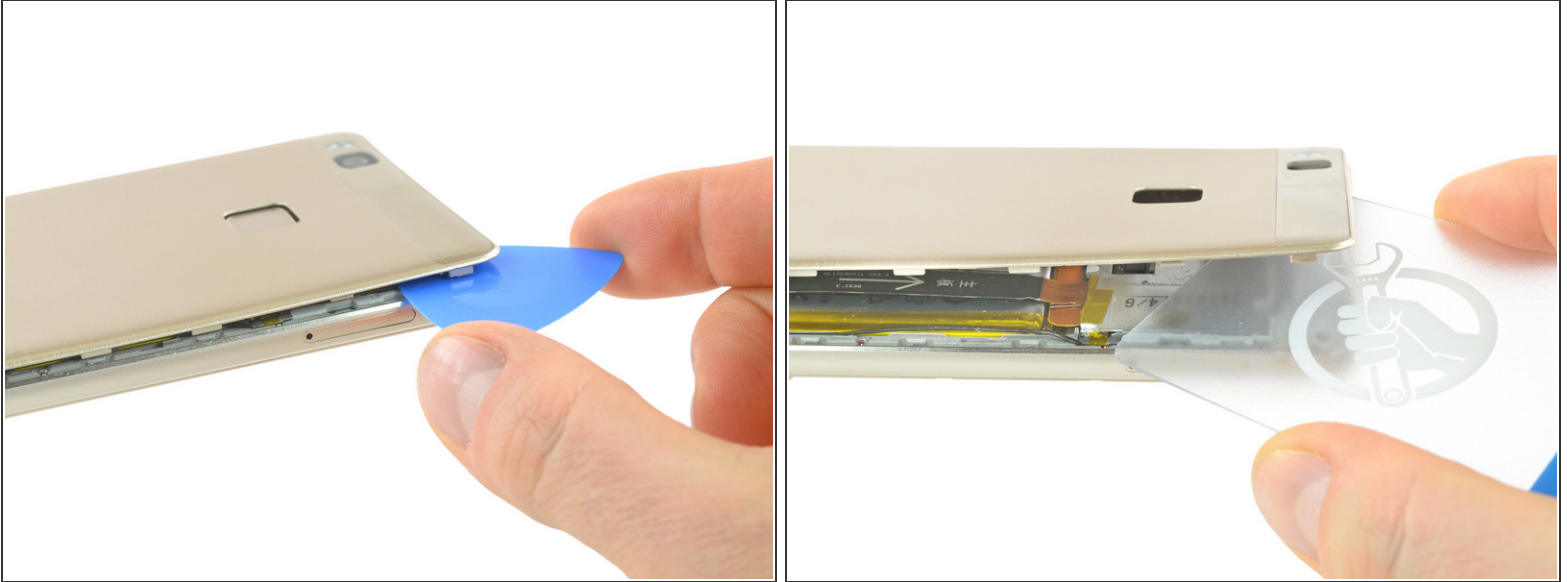



- When reaching the top right corner of the phone switch to a plastic card.
 - ❗ There is adhesive underneath the back cover that holds it to the battery and the metal plate at the top.
 - ⚠ Be careful with the flex cable at the right hand side.
- Use the plastic card to lever the back cover away and loosen it from the adhesive.

Step 3

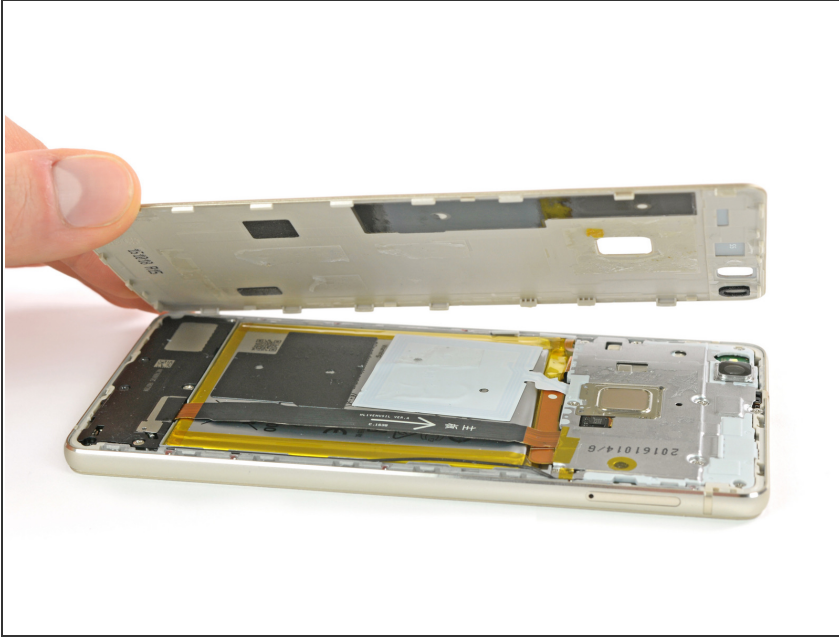

- When the back cover is freed from the adhesive you can pop it off by hand completely.

Step 4 — Fingerprint Sensor

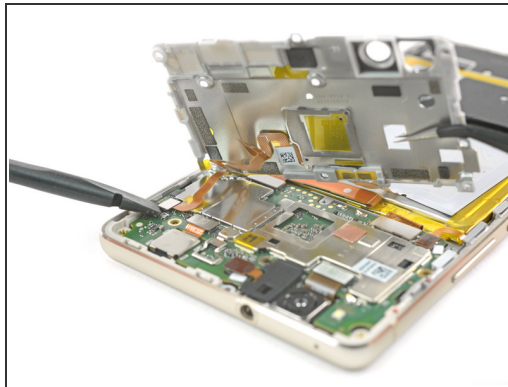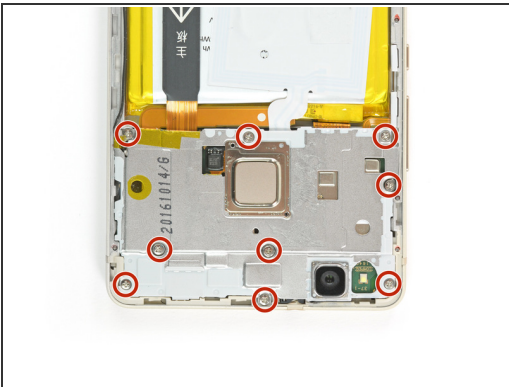

- Loosen the 9 Phillips #00 screws that hold the metal plate with the sensor.
 - ⓘ If there are any water indicators on top of the screws, take them off and set them aside.
- Unplug the fingerprint sensor connector from the motherboard.
 - ⚠ Don't take away the plate, yet. The NFC antenna is still glued to it.
- Peel off the the flex cable of the NFC antenna that is adhered to the metal plate.

To reassemble your device, follow these instructions in reverse order.

